


# C7 Stingray C7 Z06 Hood Vent Removal


- C7 Stingray and C7 Z06 hood vents are a bit different but the removal steps are the same. Most of the stripes on both of these C7's need to remove the hood vent to have factory look perfect installation.
- Remove the hood vent water drain tray by removing 2 hex screws.



- This water drain tray got held by 4 clips so just pull it out.

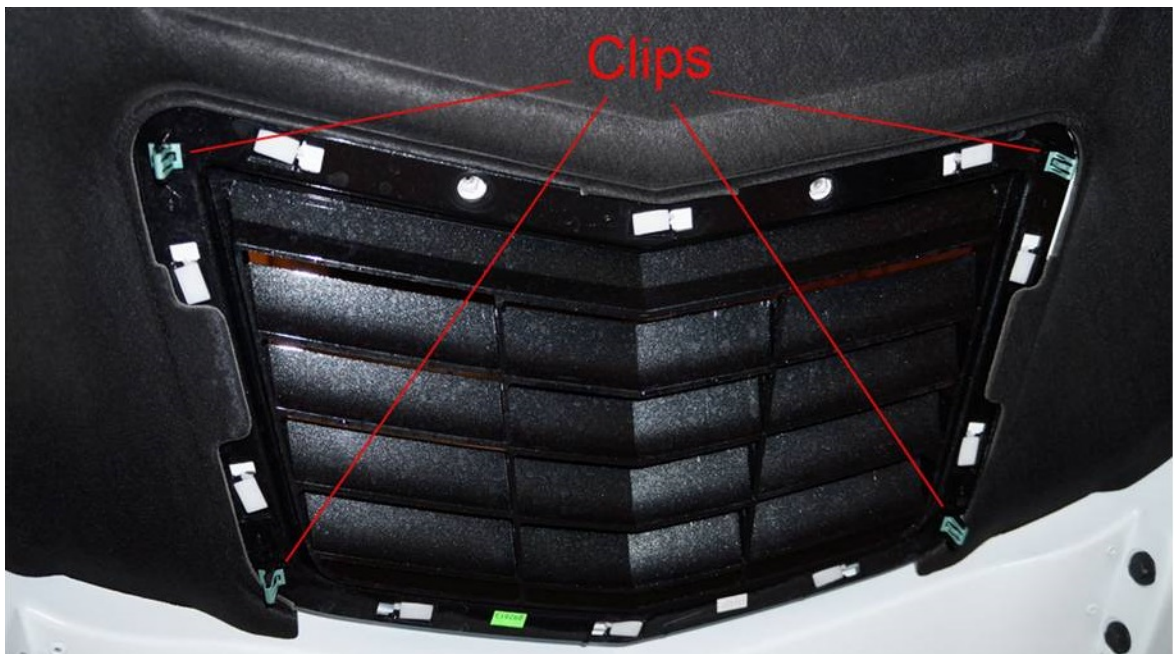

- Remove the hood liner by removing 6 plugs using the plastic plug removing tool (Autozone has this tool for \$6 or so). You can use your finger nail or a small flat head screw driver to lift up the plastic plug a bit to slide in the pry tool.

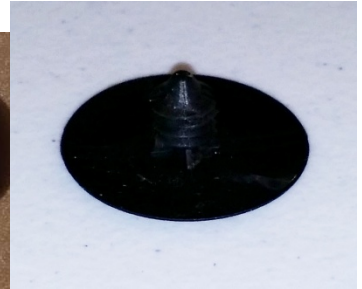

- This is your hood looks like after removing the hood liner




- Your vent got held by 10 plugs and most of the cases, you need to pry these out. Using couple layers of masking tape to tape around the head of your above pry tool.





- These are 10 hard plastic white plugs.

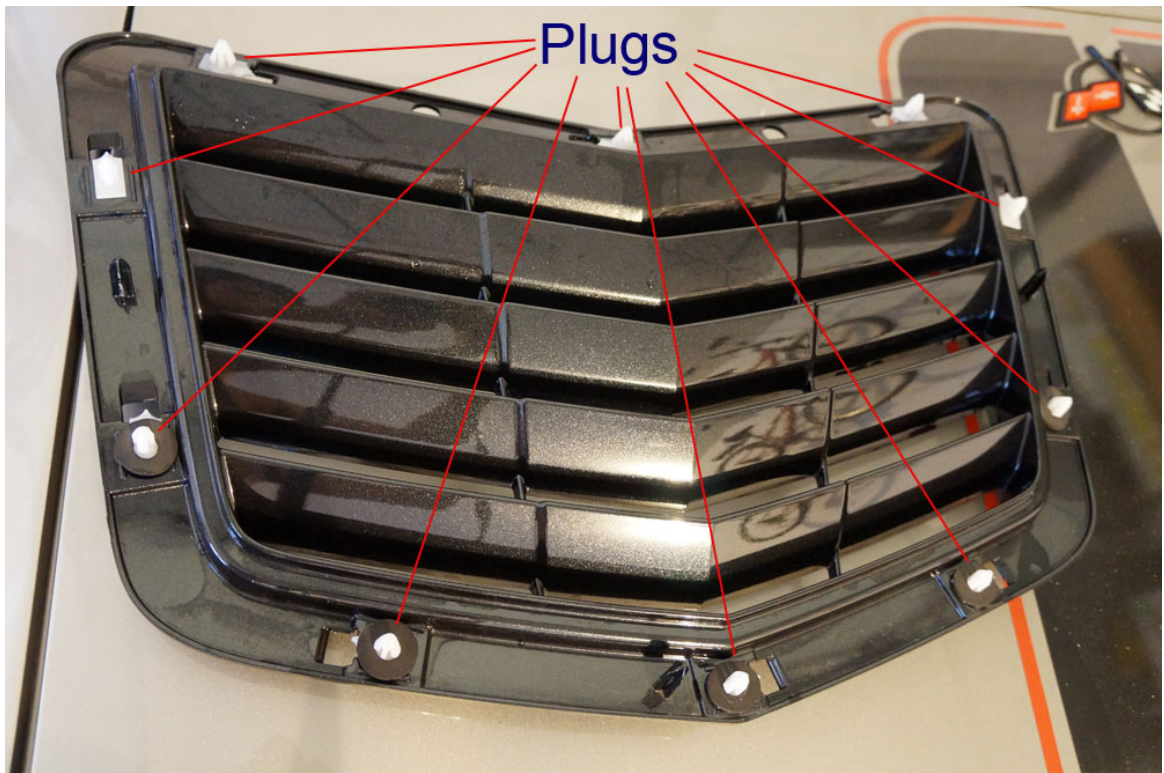

- Look around all 4 corners and you would be able to find a corner with more gap to easily slide in your covered pry tool. After slide it in, try your best to pry it as close as possible to the white plug. Don't worry much, C7 vent is super strong so you won't be able to break it! After prying up the first one, those remaining will be much easier to pry out.

