

C5 Side Stripe 3


. Please check out this instruction first to know how to mix soapy solution and applying vinyl: [http://www.vettestripes.com/wp-content/uploads/2016/03/How To Peel Off Stripes.pdf](http://www.vettestripes.com/wp-content/uploads/2016/03/How_To_Peel_Off_Stripes.pdf)

. Your stripes right next to the fender vents will come without masking tape and the stripes on the doors will come with masking tape.

. Install the stripes right next to the fender vents first. Leave them around 3/16" into the vents so you can bend them into the vents after they dried out. These pieces don't come with masking tape to make the installation easier around the complicated surface. Please look below for picture of them as a sheet of vinyl in your package.



. Wait at least 1 hr to let these pieces completely dried so you bend them inside both ends. You can heat them up using hair drier at the vents to easier bend them inside

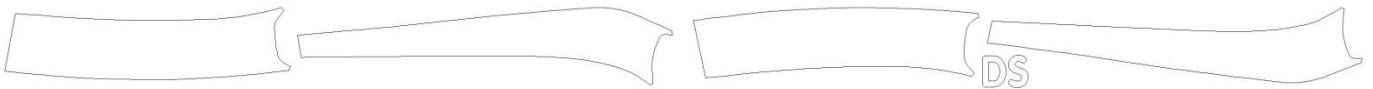

. Install your door stripes line up to the vent stripes. Squeeze all the water out. Make sure to spray good amount of soapy solution on top of the paper masking tape to let the water soak thru the paper masking tape. That way, you will peel the paper masking tape off easier.

. If your Side Stripe 3 comes with pin stripes, install the pin stripes line up with the door pin stripes.

. Wait about 30 – 45 minutes to peel off the masking tape. If the masking tapes dries up too much, spray soapy solution on them and give it another 5 minutes before peeling them off.