


C7 GT2 Stripes Instruction

- These stripes will come with clear masking tape on top of them to make alignment easier!
- Please read premask instruction here to know how to install stripes with premask:
<http://www.vettestripes.com/wp-content/uploads/2018/10/Install-Stripes-With-Premask.pdf>

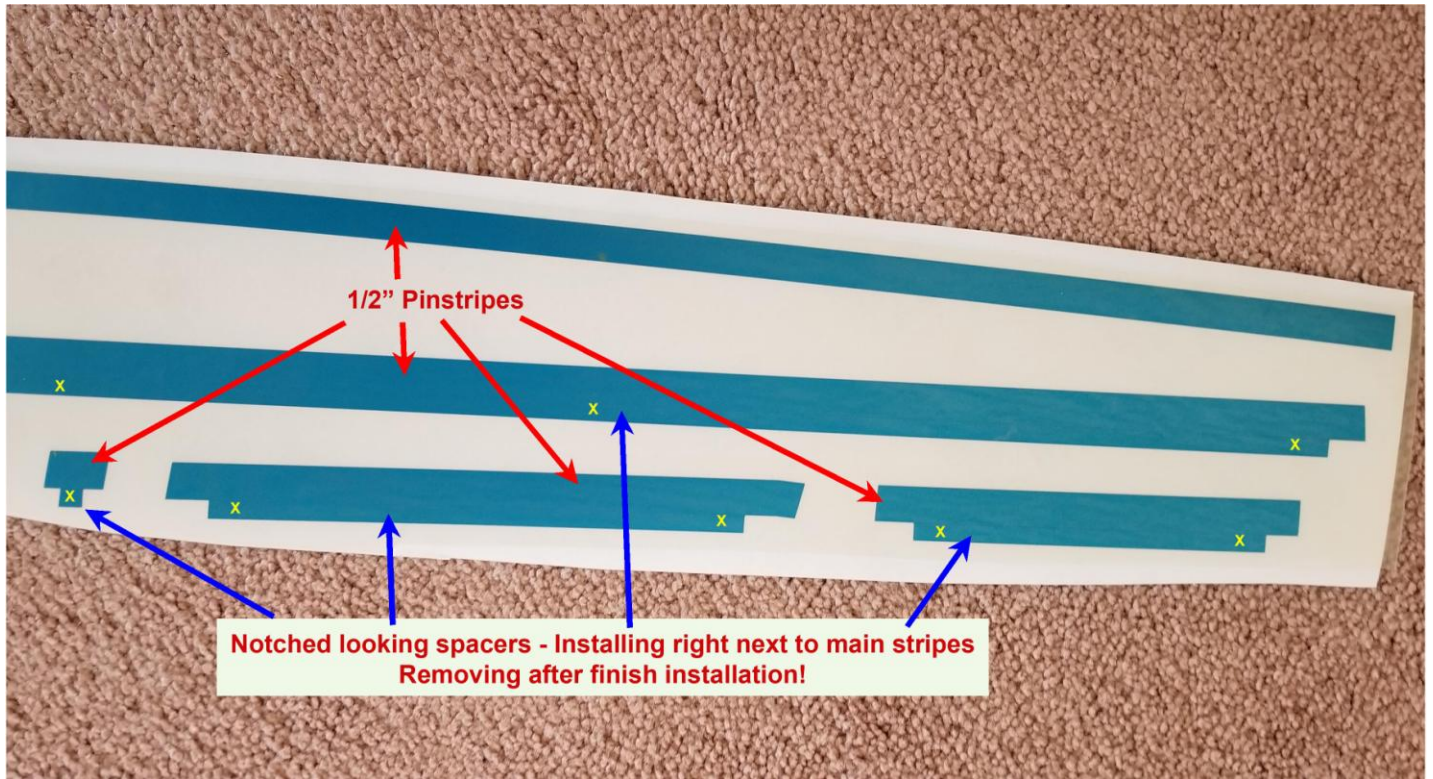

- After finish installing your Stinger stripes, you then can start installing these GT2 stripes
- For the Roof and Rear (coupe) or the Waterfall and Trunk Lid (convertible), those pinstripes will come with 1/4" notched looking removable spacers (as shown in the above picture with X marks). Install them right next on both sides of the main stripes. After finishing installation, you can peel them off. That way, you don't have to eyeball to align your pinstripes but those spacers will help keeping the correct even spaces throughout the entire stripes!
- For the Hood stripe, there are 2 separated spacers. You will need to install them right next to the top part of your Stinger stripe toward the windshield. Installing the GT2 pinstripe around the top of the hood vent and then align it next to the spacers. Peeling off hood spacers after installation.